

# INSTRUCTION MANUAL

## **Campbell Scientific CS512** **Oxyguard Type III** **Dissolved Oxygen Probe**

Revision: 12/06



Copyright © 2001-2006  
Campbell Scientific, Inc.

# ***Warranty and Assistance***

---

The **CS512 OXYGUARD TYPE III DISSOLVED OXYGEN PROBE** is warranted by CAMPBELL SCIENTIFIC, INC. to be free from defects in materials and workmanship under normal use and service for twelve (12) months from date of shipment unless specified otherwise. Batteries have no warranty. CAMPBELL SCIENTIFIC, INC.'s obligation under this warranty is limited to repairing or replacing (at CAMPBELL SCIENTIFIC, INC.'s option) defective products. The customer shall assume all costs of removing, reinstalling, and shipping defective products to CAMPBELL SCIENTIFIC, INC. CAMPBELL SCIENTIFIC, INC. will return such products by surface carrier prepaid. This warranty shall not apply to any CAMPBELL SCIENTIFIC, INC. products which have been subjected to modification, misuse, neglect, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for a particular purpose. CAMPBELL SCIENTIFIC, INC. is not liable for special, indirect, incidental, or consequential damages.

Products may not be returned without prior authorization. The following contact information is for US and International customers residing in countries served by Campbell Scientific, Inc. directly. Affiliate companies handle repairs for customers within their territories. Please visit [www.campbellsci.com](http://www.campbellsci.com) to determine which Campbell Scientific company serves your country. To obtain a Returned Materials Authorization (RMA), contact CAMPBELL SCIENTIFIC, INC., phone (435) 753-2342. After an applications engineer determines the nature of the problem, an RMA number will be issued. Please write this number clearly on the outside of the shipping container. CAMPBELL SCIENTIFIC's shipping address is:

**CAMPBELL SCIENTIFIC, INC.**

RMA#\_\_\_\_\_

815 West 1800 North

Logan, Utah 84321-1784

CAMPBELL SCIENTIFIC, INC. does not accept collect calls.

# CS512 Table of Contents

---

*PDF viewers note: These page numbers refer to the printed version of this document. Use the Adobe Acrobat® bookmarks tab for links to specific sections.*

<b>1. General Information.....</b>	<b>1</b>
<b>2. Specifications .....</b>	<b>2</b>
<b>3. Optional Probe Accessories .....</b>	<b>3</b>
<b>4. Optional Agitator .....</b>	<b>3</b>
<b>5. Application Information .....</b>	<b>4</b>
<b>6. Wiring.....</b>	<b>4</b>
<b>7. Programming .....</b>	<b>5</b>
<b>8. Calibration .....</b>	<b>6</b>
<b>9. Maintenance .....</b>	<b>7</b>
<b>10. Agitator Control .....</b>	<b>7</b>

## ***Appendix***

<b>A. Dissolved Oxygen in Fresh Water Table.....</b>	<b>A-1</b>
--	------------

## ***Figures***

1-1. CS512.....	1
4-1. Preventing Bio-fouling of the CS512.....	3
4-2. CS512 with PT4 Agitator .....	4
10-1. Agitator Wiring .....	7

## ***Table***

6-1. Sensor Wiring.....	4
-------------------------	---

**Examples**

- 1. Sample Program using P1 ..... 5
- 2. Sample Program using P2 ..... 5
- 3. Sample Program using VoltSE ..... 5
- 4. Sample Program using VoltDiff ..... 5
- 5. Sample Program using VoltSE ..... 5
- 6. Sample Program using P36..... 6
- 7. Sample Program using Expression ..... 6
- 8. Sample Program using P86 and P22 Instructions ..... 8
- 9. Sample Program using Portset ..... 8
- 10. Sample Program using Portset ..... 8

# ***Campbell Scientific CS512 Oxyguard Type III Dissolved Oxygen Probe***

---

*An accurate and reliable sensor is a critical element in any measurement system. The Oxyguard Stationary Probe meets these criteria for the measurement of dissolved oxygen.*

## **1. General Information**

The Oxyguard Stationary Probe is a galvanic probe which produces a millivolt signal proportional to the amount of oxygen present in the measured medium. Oxygen diffuses through the membrane onto the cathode, reacts chemically, and combines with the anode. An electrical current is produced by this chemical reaction which is converted from microamps to millivolts by an in-line resistor. An in-line thermistor also conditions the signal providing automatic temperature compensation. With these features, the probe produces a millivolt output proportional to the oxygen present in the medium in which it is placed. The probe consists of two parts, an upper part with cathode, anode and cable, and a lower part comprising a screw on membrane cap with fitted membrane. The cap is filled with electrolyte and simply screwed onto the top component.

The probe is self-polarizing and requires no external power source. There are two wires to connect.

Because the probe's output is linear, it is possible to connect it directly to a data acquisition system capable of handling the small millivolt signal.

The probe's robust construction and simple design make maintenance and servicing it straightforward. There is no need to send the probe back to the factory for servicing. It utilizes a strong, easy-to-clean and easy-to-change membrane in a screw-on membrane cap. Regular servicing is not required. When necessary the probe can be fully overhauled in five minutes.



*FIGURE 1-1. CS512*

## 2. Specifications

Principle of Measurement:	Membrane covered galvanic oxygen probe
Output Signal:	2.5 to 5 mV per mg l <sup>-1</sup>
Repeatability:	Better than $\pm 0.2$ mg/l calibration temperature equals measuring temperature $\pm 5^{\circ}\text{C}$
Output Impedance:	~1 kohm
Response Time:	After equilibration, 1 minute for 95% of final value
Materials of Construction:	
Probe body:	Delrin
O-rings:	Membrane O-ring = Buna N Body Seal O-ring = Viton
Membrane:	0.05 mm (2 mil) Teflon
Dimensions and Weight:	2.28" diameter x 2.3" height 15.9 oz.
Cable:	standard length 7 m (23 ft); other lengths available upon request 2-wire 22 awg shielded, PVC jacketed
Operating Conditions:	
Temperature	0° to 40°C (32° to 122°F)
Pressure:	0 to 29 psig
Minimum Submersion Depth:	60 mm (2 ½ in)
Minimum Water Flow:	1 cm/s (.39 in/sec) across membrane
Calibration:	In air or in air saturated water
Temperature Compensation:	Automatic from 4° - 40°C (40° - 104°F)
Range of Dissolved Oxygen:	0-20 mg/l, 0-200% Sat
Ships with:	5 spare membranes with O-rings 50 ml electrolyte cathode cleaning pad

### 3. Optional Probe Accessories

PT4-L — Agitator for stagnant conditions  
18026 — DO electrolyte, 1 liter  
18027 — Membrane kit, 10 membranes

### 4. Optional Agitator

The PT4 Agitator is a reliable and robust agitator for use in conjunction with probes subjected to bio-fouling in ponds and stagnant water conditions.

O<sub>2</sub> probes require a minimum water velocity across their membranes to function properly. Therefore, to measure DO in stagnant water conditions, it is necessary to move the water past the membrane to get accurate and reliable DO measurements. In many instances the water also has a high bio-loading and the probes become fouled resulting in inaccurate DO measurements.



*FIGURE 4-1. Preventing Bio-fouling of the CS512*

The PT4 Agitator overcomes these problems. The device is designed so that a soft bristle brush sweeps across the probe membrane or sensor tip. This sweeping action of the brush provides the required water velocity as well as prevents the membrane from becoming bio-fouled.

The optimum sweeping frequency depends upon the design of probe and type of membrane used and water conditions. An ON-time of 0.25 seconds and OFF-time of 5 seconds is suitable in most circumstances.

Agitator's overall size: 7-1/8" x 3-1/4" diameter, 1-1/4 lb. (180mm x 83mm, 0.6 kg)  
Supplied with 10 ft. (3 meters) cable.

Power required: 10.5 to 18 VDC at the agitator, 1.1 amps. Maximum ON-time is 3 seconds.

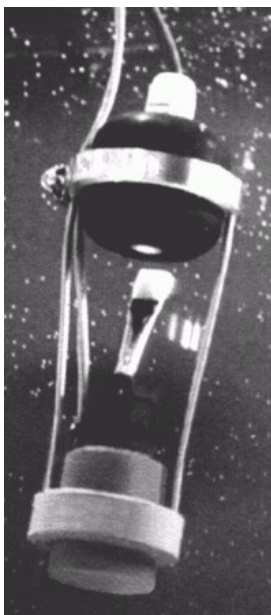


FIGURE 4-2. CS512 with PT4 Agitator

Optional Repeat Cycle Timer for Agitators: Reciprocating action may be controlled by the optional solid state Repeat Cycle Timer. It sends 12 VDC pulses to the agitator coil. The ON-time is 0.25 sec. The OFF-time is adjustable from 3 to 12 sec.; requires supply voltage 10 to 17 VDC; housed in watertight cylinder 6.6" x 2" diameter (170 mm X 50 mm).

## 5. Application Information

### NOTE

SCWin users: This manual was written primarily for those whose needs are not met by SCWin. Your procedure is much simpler: just add the CS512 probe (it's in the water folder), save your program, and follow the wiring shown in Step 2 of SCWIN.

## 6. Wiring

The CS512 probe can use one differential channel or one single-ended channel. Differential wiring is better at rejecting electrical noise and ground loop error.

TABLE 6-1. Sensor Wiring

TABLE 6-1. Sensor Wiring			
Color	Function	CR510, CR10X, CR800, CR850, CR23X, CR1000, CR3000	CR200 Series
White	Signal +	Differential High, or Single-Ended Channel	Single-Ended Channel
Blue	Signal -	Differential Low or AG	Ground



## 7. Programming

In the CR510, CR10X, and CR23X datalogger, Instruction P1 or P2 can be used. Example 1 uses a single-ended measurement for the CS512 probe; example 2 uses a differential measurement. The example measurement instructions that follow do not store data to final storage. Additional instructions (typically P92, P77, and output processing instructions such as P70) are required to store data permanently.

### EXAMPLE 1. Sample Program using P1

1: Volt (SE) (P1)		
1:	1	Reps
2:	24	250 mV 60 Hz Rejection Range ; code 23 used for CR23X
3:	1	SE Channel
4:	1	Loc [ DOmV ]
5:	1.0	Multiplier *See Calibration*
6:	0.0	Offset

### EXAMPLE 2. Sample Program using P2

1: Volt (Diff) (P2)		
1:	1	Reps
2:	24	250 mV 60 Hz Rejection Range ; code 23 used for CR23X
3:	1	DIFF Channel
4:	1	Loc [ DOmV ]
5:	1.0	Multiplier *See Calibration*
6:	0.0	Offset

In the CR1000, CR800, CR850, and CR3000 dataloggers, instruction VoltDiff or VoltSE is used to measure the CS512 probe.

### EXAMPLE 3. Sample Program using VoltSE

VoltSE (DOmV,1,mV250,1,1,0,_60Hz,1.0,0)
---

### EXAMPLE 4. Sample Program using VoltDiff

VoltDiff (DOmV,1,mV250,1,True ,0,_60Hz,1.0,0)
---

In the CR200 series dataloggers, only the instruction VoltSE is used to measure the CS512 probe.

### EXAMPLE 5. Sample Program using VoltSE.

VoltSE (DOmV,1,1,1.0,0)
-------------------------

## 8. Calibration

The multiplier is used to calibrate the CS512 probe. To calculate the multiplier:

- 1) Program the datalogger using a multiplier of one.
- 2) Place the OxyGuard probe in the air, shaded from the sun. Wait for readings to stabilize. This may take 15 minutes or more.
- 3) Determine the air temperature and barometric pressure.
- 4) Using a calibration chart such as that provided in the probe's manual, determine the oxygen concentration of the air.
- 5) Use the following equation to calculate the multiplier:
 
$$M = P/R$$

$$M = \text{Multiplier}$$

$$P = \text{Concentration in PPM of the air (from the calibration chart in Appendix A)}$$

$$R = \text{The signal output of the OxyGuard probe when using a multiplier of one}$$
- 6) Change the multiplier in the datalogger program from one to the calculated number.

A more common way to enter the multiplier is to insert a separate instruction in the program. This will allow a new multiplier to be added to the program without rewriting, compiling, and downloading the program to the data logger.

In the CR510, CR10X, and CR23X, use Instruction P36. The multiplier is entered into an input location called DOMult using the numeric display in PC200W, PC208W, LoggerNet, PC400, PConnect, PConnectCE, or the CR10KD.

### EXAMPLE 6. Sample Program using P36

57: Z=X\*Y (P36)

1:	1	X Loc [ DOMV	]
2:	2	Y Loc [ DOMult	]
3:	3	Z Loc [ DOppm	]

In all dataloggers that use CRBasic, an expression is written. The multiplier value is entered into the expression through the Public Table using the numeric display in PC200W, LoggerNet, PC400, PConnect, and PConnectCE.

### EXAMPLE 7. Sample Program using Expression

DOppm = DOMult \* DOMV

## 9. Maintenance

The CS512 probe needs little maintenance. Regular cleaning of the membrane is all that is required. The membrane is very durable and can be cleaned with a cloth or soft paper. Do not scratch it clean with your fingernail.

## 10. Agitator Control

In low flow conditions (less than about 5 cm/sec), it may be necessary to add an agitator to the CS512 probe. Campbell Scientific ships the agitator with a repeat cycle timer. Using the repeat cycle timer requires no datalogger programming. However, some users choose to use a solid state relay and have the datalogger agitate the water on the probe face either periodically throughout the day or just before measurement. Agitating just before the measurement saves on power and causes less wear and tear on the agitator and probe membrane.

The wiring for the agitator as controlled by this example program would be as follows:

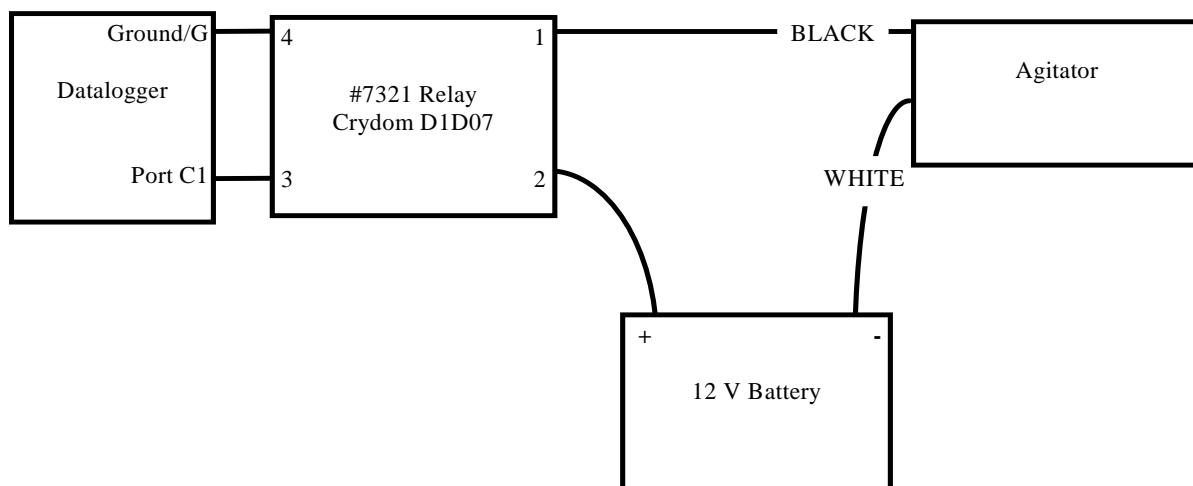


FIGURE 10-1. Agitator Wiring

The following instructions would trigger the agitator as discussed in the agitator manual.

In the CR510, CR10X, and CR23X, use instruction P86 and P22.

**EXAMPLE 8. Sample Program using P86 and P22 Instructions**

```
45: Do (P86)
    1:  41          Set Port 1 High

46: Excitation with Delay (P22)
    1:  1          Ex Channel
    2:  20         Delay W/Ex (units = 0.01 sec)
    3:  0          Delay After Ex (units = 0.01 sec)
    4:  0          mV Excitation

47: Do (P86)
    1:  51          Set Port 1 Low

48: End (P95)
```

In the CR200 series dataloggers, use the Portset instruction.

**EXAMPLE 9. Sample Program using Portset**

```
Portset (1,1)
Delay(500,msec)
Portset(1,0)
```

In the CR1000, CR800, CR850, and CR3000 dataloggers, use the Portset instruction.

**EXAMPLE 10. Sample Program using Portset**

```
Portset (1,1)
Delay (1,500,msec)
Portset (1,0)
```

The above example is not as power efficient as possible and would require AC power to maintain a sufficient battery charge. If it is necessary to operate an agitator without AC power available, write the program so that the agitator is only operated for a short period of time just before the measurement is to be taken.

# Appendix A. Dissolved Oxygen in Fresh Water Table

Solubility of dissolved oxygen (mg/L) as a function of temperature and pressure for moist air, salinity = 0.0 ppt.

TEMP.		ALTITUDE (Feet/Metres) and equivalent BAROMETRIC PRESSURE (mm Hg/mbar)														Feet Metres mm Hg mbar
		0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000		
		0	152	305	457	610	762	914	1067	1219	1372	1524	1676	1829		
°C	°F	760	747	733	721	708	695	683	671	659	648	636	625	614		
		1013	995	978	961	944	927	911	895	879	863	848	833	819		
0	32.0	14.60	14.34	14.09	13.84	13.60	13.36	13.12	12.89	12.67	12.44	12.22	12.01	11.80		
1	33.8	14.20	13.95	13.70	13.46	13.22	12.99	12.76	12.54	12.32	12.10	11.89	11.68	11.47		
2	35.6	13.81	13.57	13.33	13.10	12.87	12.64	12.42	12.20	11.98	11.77	11.56	11.36	11.16		
3	37.4	13.45	13.21	12.98	12.75	12.52	12.30	12.09	11.87	11.66	11.46	11.26	11.06	10.86		
4	39.2	13.09	12.86	12.64	12.41	12.20	11.98	11.77	11.56	11.36	11.16	10.96	10.77	10.58		
5	41.0	12.76	12.53	12.31	12.09	11.88	11.67	11.47	11.26	11.07	10.87	10.68	10.49	10.31		
6	42.8	12.44	12.22	12.00	11.79	11.58	11.38	11.18	10.98	10.79	10.60	10.41	10.23	10.05		
7	44.6	12.13	11.91	11.70	11.50	11.29	11.10	10.90	10.71	10.52	10.33	10.15	9.97	9.80		
8	46.4	11.83	11.62	11.42	11.22	11.02	10.83	10.63	10.45	10.26	10.08	9.91	9.73	9.56		
9	48.2	11.55	11.34	11.15	10.95	10.76	10.57	10.38	10.20	10.02	9.84	9.67	9.50	9.33		
10	50.0	11.28	11.08	10.88	10.69	10.50	10.32	10.14	9.96	9.78	9.61	9.44	9.27	9.11		
11	51.8	11.02	10.82	10.63	10.44	10.26	10.08	9.90	9.73	9.56	9.39	9.22	9.06	8.90		
12	53.6	10.77	10.58	10.39	10.21	10.03	9.85	9.68	9.51	9.34	9.17	9.01	8.85	8.70		
13	55.4	10.53	10.34	10.16	9.98	9.80	9.63	9.46	9.29	9.13	8.97	8.81	8.66	8.50		
14	57.2	10.29	10.11	9.93	9.76	9.59	9.42	9.25	9.09	8.93	8.77	8.62	8.47	8.32		
15	59.0	10.07	9.89	9.72	9.55	9.38	9.22	9.05	8.89	8.74	8.58	8.43	8.28	8.14		
16	60.8	9.86	9.68	9.51	9.35	9.18	9.02	8.86	8.70	8.55	8.40	8.25	8.11	7.96		
17	62.6	9.65	9.48	9.31	9.15	8.99	8.83	8.68	8.52	8.37	8.22	8.08	7.94	7.80		
18	64.4	9.45	9.29	9.12	8.96	8.80	8.65	8.50	8.35	8.20	8.06	7.91	7.77	7.64		
19	66.2	9.26	9.10	8.94	8.78	8.63	8.47	8.32	8.18	8.03	7.89	7.75	7.62	7.48		
20	68.0	9.08	8.92	8.76	8.61	8.45	8.30	8.16	8.01	7.87	7.73	7.60	7.46	7.33		
21	69.8	8.90	8.74	8.59	8.44	8.29	8.14	8.00	7.86	7.72	7.58	7.45	7.32	7.19		
22	71.6	8.73	8.57	8.42	8.27	8.13	7.98	7.84	7.71	7.57	7.44	7.31	7.18	7.05		
23	73.4	8.56	8.41	8.26	8.12	7.97	7.83	7.69	7.56	7.43	7.29	7.17	7.04	6.92		
24	75.2	8.40	8.25	8.11	7.96	7.82	7.69	7.55	7.42	7.29	7.16	7.03	6.91	6.79		
25	77.0	8.24	8.10	7.96	7.82	7.68	7.54	7.41	7.28	7.15	7.03	6.90	6.78	6.66		
26	78.8	8.09	7.95	7.81	7.67	7.54	7.41	7.28	7.15	7.02	6.90	6.78	6.66	6.54		
27	80.6	7.95	7.81	7.67	7.54	7.40	7.27	7.14	7.02	6.90	6.77	6.65	6.54	6.42		
28	82.4	7.81	7.67	7.53	7.40	7.27	7.14	7.02	6.89	6.77	6.65	6.54	6.42	6.31		
29	84.2	7.67	7.54	7.40	7.27	7.14	7.02	6.90	6.77	6.65	6.54	6.42	6.31	6.20		
30	86.0	7.54	7.41	7.28	7.15	7.02	6.90	6.78	6.66	6.54	6.42	6.31	6.20	6.09		
31	87.8	7.41	7.28	7.15	7.03	6.90	6.78	6.66	6.54	6.43	6.32	6.20	6.09	5.99		
32	89.6	7.29	7.16	7.03	6.91	6.79	6.67	6.55	6.43	6.32	6.21	6.10	5.99	5.89		
33	91.4	7.17	7.04	6.92	6.79	6.67	6.56	6.44	6.33	6.22	6.11	6.00	5.89	5.79		
34	93.2	7.05	6.92	6.80	6.68	6.56	6.45	6.34	6.22	6.11	6.01	5.90	5.80	5.69		
35	95.0	6.93	6.81	6.69	6.57	6.46	6.34	6.23	6.12	6.02	5.91	5.81	5.70	5.60		
36	96.8	6.82	6.70	6.59	6.47	6.36	6.24	6.13	6.03	5.92	5.82	5.71	5.61	5.51		
37	98.6	6.72	6.60	6.48	6.37	6.26	6.15	6.04	5.93	5.83	5.72	5.62	5.52	5.43		
38	100.4	6.61	6.49	6.38	6.27	6.16	6.05	5.94	5.84	5.74	5.63	5.53	5.44	5.34		
39	102.2	6.51	6.39	6.28	6.17	6.06	5.96	5.85	5.75	5.65	5.55	5.45	5.35	5.26		
40	104.0	6.41	6.30	6.19	6.08	5.97	5.86	5.76	5.66	5.56	5.46	5.37	5.27	5.18		





## **Campbell Scientific Companies**

---

### **Campbell Scientific, Inc. (CSI)**

815 West 1800 North  
Logan, Utah 84321  
UNITED STATES  
[www.campbellsci.com](http://www.campbellsci.com)  
[info@campbellsci.com](mailto:info@campbellsci.com)

### **Campbell Scientific Africa Pty. Ltd. (CSAf)**

PO Box 2450  
Somerset West 7129  
SOUTH AFRICA  
[www.csafrica.co.za](http://www.csafrica.co.za)  
[cleroux@csafrica.co.za](mailto:cleroux@csafrica.co.za)

### **Campbell Scientific Australia Pty. Ltd. (CSA)**

PO Box 444  
Thuringowa Central  
QLD 4812 AUSTRALIA  
[www.campbellsci.com.au](http://www.campbellsci.com.au)  
[info@campbellsci.com.au](mailto:info@campbellsci.com.au)

### **Campbell Scientific do Brazil Ltda. (CSB)**

Rua Luisa Crapsi Orsi, 15 Butantã  
CEP: 005543-000 São Paulo SP BRAZIL  
[www.campbellsci.com.br](http://www.campbellsci.com.br)  
[suporte@campbellsci.com.br](mailto:suporte@campbellsci.com.br)

### **Campbell Scientific Canada Corp. (CSC)**

11564 - 149th Street NW  
Edmonton, Alberta T5M 1W7  
CANADA  
[www.campbellsci.ca](http://www.campbellsci.ca)  
[dataloggers@campbellsci.ca](mailto:dataloggers@campbellsci.ca)

### **Campbell Scientific Ltd. (CSL)**

Campbell Park  
80 Hathern Road  
Shepshed, Loughborough LE12 9GX  
UNITED KINGDOM  
[www.campbellsci.co.uk](http://www.campbellsci.co.uk)  
[sales@campbellsci.co.uk](mailto:sales@campbellsci.co.uk)

### **Campbell Scientific Ltd. (France)**

Miniparc du Verger - Bat. H  
1, rue de Terre Neuve - Les Ulis  
91967 COURTABOEUF CEDEX  
FRANCE  
[www.campbellsci.fr](http://www.campbellsci.fr)  
[campbell.scientific@wanadoo.fr](mailto:campbell.scientific@wanadoo.fr)

### **Campbell Scientific Spain, S. L.**

Psg. Font 14, local 8  
08013 Barcelona  
SPAIN  
[www.campbellsci.es](http://www.campbellsci.es)  
[info@campbellsci.es](mailto:info@campbellsci.es)